



# LG Muziq LX570 Front Case Replacement

Removing the front case of the LG Muziq LX570 to access the both display panels and the camera.

Written By: Raymond Ching





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front Case



- Use a spudger to remove the two screw covers below display.
- Use a screw driver to remove the four Phillips #00 (3.3mm) screws at corners of the display.


## Step 2



**⚠ Caution:** Wires and ribbon connect the front case to the main body. Exhibit care when separating front case from the main body as to not break the connections.

- **Note:** Side buttons may fall out when removing the front case. Do not misplace them.
- **Note:** Each side button will only fit in the side that it came from.
- Insert a spudger between the black and grey casings and gently spread them apart.
- Work around the device gradually, opening the gap further.

## Step 3

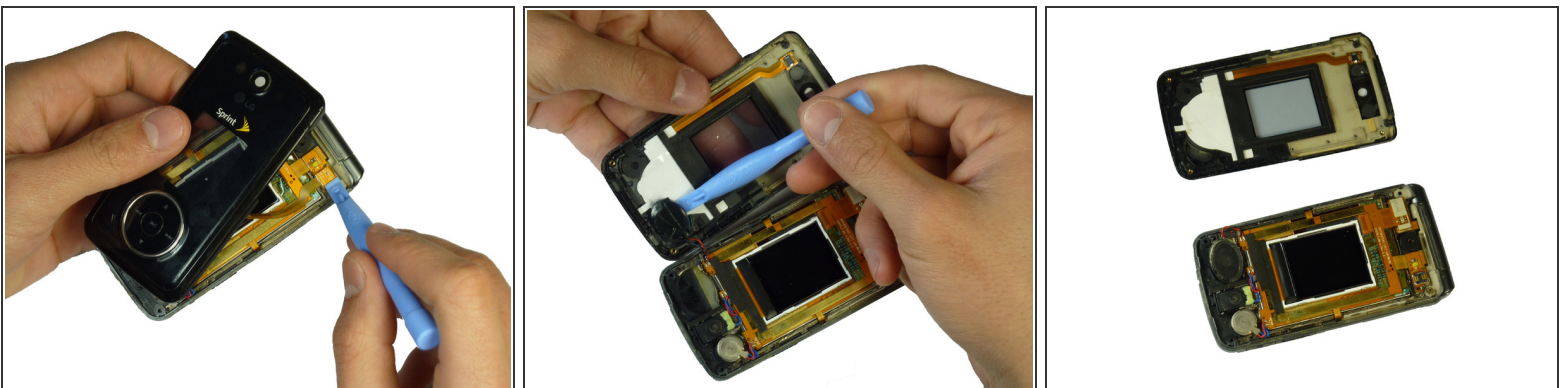

**⚠ Caution:** The wires and ribbon connector can break easily. Exhibit care when removing them.

- Use the spudger and lift upward to disconnect the ribbon from the main part of the phone.
- Carefully remove any parts stuck to the front case such as speakers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 08:38:52 AM.